

2013-

ES 350/300h

TVIP V4

REMOTE ENGINE STARTER (RES)  
OWNER'S GUIDE



## REMOTE ENGINE STARTER

### Owner's Guide



02-16-10  
090002-3121B700

---

# TABLE OF CONTENTS

---

	PAGE
INTRODUCTION	1
IMPORTANT INFORMATION	2-3
OPERATION	
BEFORE STARTING ENGINE	4
REMOTE ENGINE START	5
REMOTE ENGINE STOP	6
AUTOMATIC ENGINE SHUTDOWN	6-7
REMOTE ENGINE STARTER INFORMATION	8
WARNING AND NOTICE INFORMATION	9

---

## INTRODUCTION

---


The REMOTE ENGINE STARTER allows you to start your engine from outside the vehicle. It utilizes your vehicle's keyless entry remote, so there is no need to carry around an extra remote. The REMOTE ENGINE STARTER is operated the same way for vehicles equipped with or without the Smart Entry / Push Start system; simply push the remote's LOCK button in a quick, two step sequence. In addition, the REMOTE ENGINE STARTER can activate the heater or air conditioner according to your preset temperature controls, providing you with a comfortable cabin upon entry. As an added convenience, the REMOTE ENGINE STARTER can also activate the defroster (when preset) to clear up the windshield during cold weather.

To ensure your safety, and the safety of anyone near the vehicle, the REMOTE ENGINE STARTER is designed to shut the engine off when it detects any attempt to enter or move the vehicle after a remote engine start. Please consult your Lexus dealer for more details.

**NOTE:** To utilize the REMOTE ENGINE STARTER, your vehicle must have an automatic transmission; it cannot be used for manual transmission models. The transmission range for remote start may be shorter than the remote's basic keyless entry operation. Range can also be affected by the surrounding environment. Laws in some communities require that the vehicle be within view of anyone using the REMOTE ENGINE STARTER. In some states, use of the REMOTE ENGINE STARTER may violate state or local laws. Before using the REMOTE ENGINE STARTER, check your state and local laws.

For any questions or concerns about the REMOTE ENGINE STARTER, please call Lexus Customer Relations at (800)255-3987.

## IMPORTANT INFORMATION

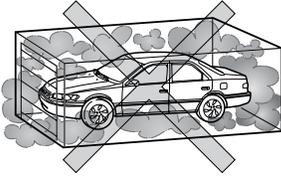


### **Caution**

Do not start the engine in an enclosed area (such as a garage or indoor parking lot) where too much exhaust may accumulate and create a hazardous environment with potential for CO poisoning.



### **Caution**

Do not start the engine if a child or pet are present in or near the vehicle. Interior power components such as windows and seats can accidentally be switched on and lead to injury.

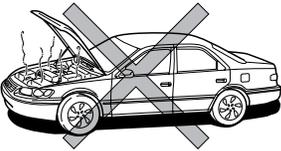

### **Caution**

Do not check the engine while it is still warm after being remotely started. Allow at least five minutes for the engine to cool to avoid being burned.



### **Caution**

Do not start the engine near dry foliage, paper, or other flammable substances. The exhaust tube and emissions can create a fire hazard at high temperatures.



### **Caution**


Do not use the REMOTE ENGINE STARTER from a distance where the vehicle cannot be seen. Children or small animals should not be near the vehicle.



### **Caution**


The general operating temperature of the REMOTE ENGINE STARTER under ideal conditions is above -22° F (-30° C). Due to multiple Vehicle Side variables, this operating temperature may fluctuate.

## IMPORTANT INFORMATION

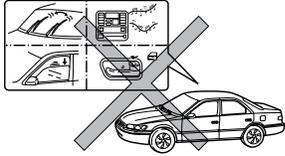


### **Caution**

Always shut off components such as the windshield wipers and radio after parking. If left on, such components may be damaged by remote engine start in extremely cold weather. Check that all vehicle windows are closed and all doors locked after parking.

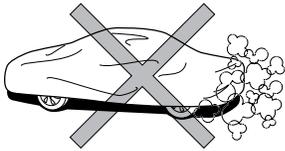


### **Caution**

Do not start the engine with the body cover still on the vehicle. The exhaust tube and emissions are capable of starting a fire at high temperatures.

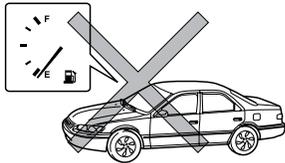

### **Caution**

Only use the REMOTE ENGINE STARTER when you intend to drive the vehicle; excessive engine starting consumes fuel and battery power.

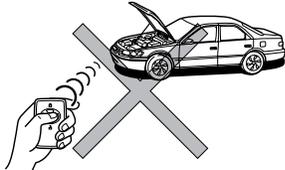

### **Caution**

To help reduce the risk of injury during engine service, the REMOTE ENGINE STARTER will not function while the hood is open.



### **Caution**

REMOTE ENGINE STARTER cannot be initiated when Remote Air Conditioning / Solar Ventilation System is activated, and Remote Air Conditioning / Solar Ventilation System cannot be activated when REMOTE ENGINE STARTER is operational.


## OPERATION

### BEFORE STARTING THE ENGINE

Before using the REMOTE ENGINE STARTER to start your vehicle, please be sure of the following conditions.



The shift lever is in the "P" position.

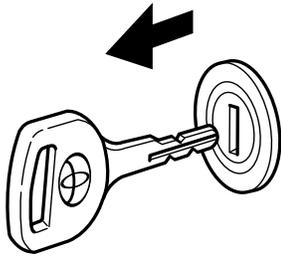


(Without Push Start)

The key is not inserted in the key cylinder.


(With Push Start)

The engine can be remotely started regardless of whether the driver has a smart key remote inside or outside the vehicle.

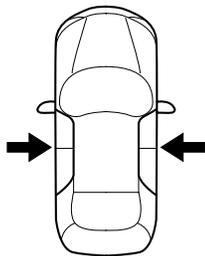

All doors are closed.

*\*Some models equipped with rear hatch windows can be remotely locked but will not Remote Start unless the window is properly closed.*

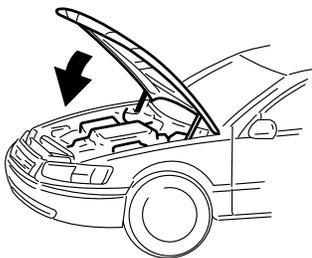


The hood is closed.

## OPERATION

### REMOTE ENGINE START


To start a vehicle remotely, press and release the LOCK button twice within two seconds, then press and hold the LOCK button for three seconds.

**STEP 1.** Press and release the LOCK button on the remote twice within two seconds. The hazard lights will flash each time.

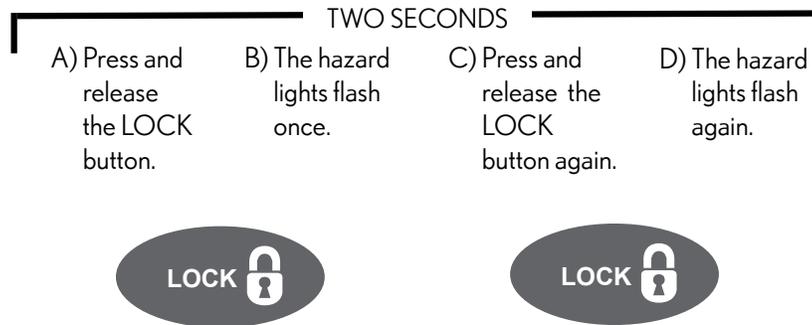

#### FOLLOWED IMMEDIATELY BY:

**STEP 2.** Press and hold the LOCK button on the remote for three seconds. The hazard lights flash once when pressed, then again after three seconds. The engine starts, and the hazard lights flash for 20 seconds.

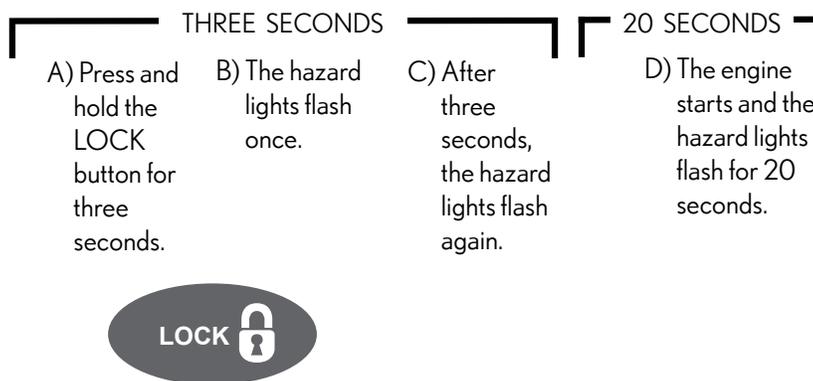

**NOTE:** Vehicles started with the Remote Engine Starter can idle for a total of 20 minutes, however automatic engine shutdown occurs after 10 minutes of run-time. You can always restart the Vehicle after this initial shutdown. Once the total run-time exceeds 20 minutes the vehicle must be manually started in order to reset the Remote Engine Starter.

**NOTE:** For vehicles equipped with Piezo, the buzzer will chirp the same number of times that the light flashes.

For any questions or concerns about the Remote Engine Starter, please call Lexus Customer Relations at (800) 255-3987.

## OPERATION

### REMOTE ENGINE STOP

There are two methods by which to shut off the vehicle engine remotely: Either press the UNLOCK button once OR press and hold the LOCK button for two or more seconds.

**METHOD 1:** Press the UNLOCK button on the remote. The engine stops and the hazard lights flash twice.



A) Press the UNLOCK button.

B) The engine stops.

C) The hazard lights flash twice.

Using Method 1, your vehicle will remain unlocked for 30 seconds. Then it automatically relocks if no doors are opened. If your vehicle will not be in plain view for that time, or you have other security concerns, you may wish to use Method 2 (below), which does not unlock the vehicle.

**METHOD 2:** Press and hold the LOCK button on the remote for two or more seconds. The engine stops and the hazard lights flash once.



A) Press and hold the LOCK button for two seconds or more.


 
B) The engine stops.

C) The hazard lights flash once.

**NOTE:** All doors will remain locked after the engine is shut off.

**NOTE:** For vehicles equipped with Piezo, the buzzer will chirp the same number of times that the light flashes.

### AUTOMATIC ENGINE SHUTDOWN

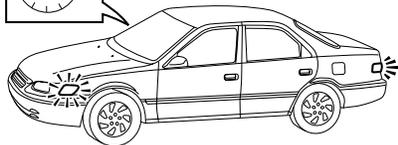

The engine will stop automatically after 10 minutes.

## OPERATION


### AUTOMATIC ENGINE SHUTDOWN

The Remote Engine Starter will automatically shut down or will not start the vehicle's engine under the following conditions:




If the total run-time has exceeded 20 minutes.

**NOTE:** The vehicle will have to be manually restarted to reset the run-time.

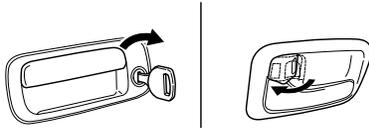

If any door is unlocked manually or via Smart Key.

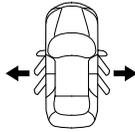

If any door is opened.




If the shift lever is moved to any position other than "P."



If the hood is opened.



If the vehicle needs service and the check engine light stays on constantly.

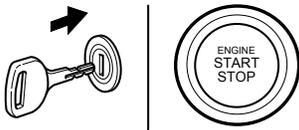

(Without Push Start)

The key is inserted in the key cylinder.

(With Push Start)

If the push button is pressed.



If the brake pedal is depressed.



If the security alarm is triggered.

**NOTE:** The engine will continue to run if the panic alarm is triggered.

## REMOTE ENGINE STARTER INFORMATION

### HEATER / AIR CONDITIONER / DEFROSTER / DEFOGGER SETTINGS

For your comfort and convenience, the vehicle's air conditioning system controls can be preset to operate the heater, air conditioner, and defroster/defogger at engine startup. The two tables below contain the settings recommended for best results. Users should preset these before exiting the vehicle. (Please see your vehicle's owner's manual for available settings.)

#### VEHICLES WITH AUTOMATIC AIR CONDITIONER

	<b>Auto Button</b>	<b>A/C Button</b>	<b>Temperature Selector</b>	<b>Windshield Airflow Button</b>	<b>Fan Speed Selector</b>
<b>Heat</b>	ON	OFF	User Settings	OFF	OFF
<b>Cool</b>	ON	ON	User Settings	OFF	OFF
<b>Defrost</b>	OFF	ON	Max Setting	ON	HIGH
<b>Defog</b>	OFF	ON	Max Setting	ON	HIGH

**NOTE:** The Remote Engine Starter may not activate the rear window defroster/defogger.

#### VEHICLES WITH MANUAL AIR CONDITIONER

	<b>A/C Button</b>	<b>Temperature Selector</b>	<b>Airflow Selector</b>	<b>Fan Speed Selector</b>
<b>Heat</b>	OFF	WARM	PANEL	HIGH
<b>Cool</b>	ON	COLD	PANEL	HIGH
<b>Defrost</b>	ON	WARM	WINDSHIELD	HIGH
<b>Defog</b>	ON	WARM	WINDSHIELD	HIGH

**NOTE:** The Remote Engine Starter may not activate the rear window defroster/defogger.

#### VEHICLES WITH HEATED AND VENTILATED SEATS

For vehicles equipped with Heated and Ventilated front seats these features can also be turned on so that when the vehicle is remote started these features will provide you with additional comfort upon entering the vehicle.

#### REMOTE ENGINE STARTER RANGE

The Remote Engine Starter can be effectively operated up to 80 feet in an open space. The physical makeup of the surrounding environment (hills, trees, buildings, etc.) may affect the Remote Engine Starter's maximum range.

---

 **Warning**

---

- The Remote Engine Starter is for vehicles with automatic transmissions only. Do not use it for the manual transmission vehicles.
- This product is applicable only to vehicles with 12V DC, negative grounding specifications. Do not use in vehicles with 24V specifications. Otherwise, damage to the unit or a fire may result.
- Do not allow children to play with remote controls. The doors may be locked or unlocked, and the engine may be started unintentionally.
- If an unusual event occurs, such as liquids spilling onto the product, or the product emitting smoke or strange odors, stop using it immediately and consult the dealer from whom you purchased it. Continued use of the product before corrective actions are taken may result in an accident, injury, or fire.
- Never pull the plastic bag over your head. Otherwise, a serious injury or death from suffocation may occur.

---

 **Caution**

---

- Do not use this product for applications other than in-vehicle use. An electric shock or injury may result.
- Do not operate the Remote Engine Starter if the Check Engine Light stays on and engine service is required.
- Never attempt to disassemble or modify the product. An accident, fire, or electric shock may result.
- When replacing fuses, be sure to use fuses with the same specified capacity (amperage). Otherwise, damage to the unit or vehicle, fire, or electric shock may result.
- All features may not be applicable to all vehicle models.
- Contents subject to change without notice.

**NOTE:** Laws in some communities require that the vehicle be within view of anyone using the Remote Engine Starter. In some states, use of the Remote Engine Starter may violate state or local laws. Before using the Remote Engine Starter, check your state and local laws.